

Marca	Modelo	Tipo de Impresora	Servidor de impresión		
			Modelo		
			5008	5003	5009
			1U	1P	1U
	Business InkJet 1000		OK		OK
	Color Laserjet 1600	GDI(USB)	OK		OK
	Color Laserjet 2500	Parallel/USB (PCL6/5C)	OK	OK	OK
	Color LaserJet 2550	PCL6/PS level 3 (USB)	OK	OK	OK
	Color LaserJet 2550L/LN	PCL6/PS level 3 (USB)	OK		OK
	Color LaserJet 2600		OK		OK
	Color LaserJet 2605	PCL6/5E(USB)	OK	OK	OK
	Color LaserJet 2700n	USB	OK		OK
	Color LaserJet 2840		OK		OK
	Color LaserJet 3700	PCL6/5C(USB,Parallel)	OK	OK	OK
	Color LaserJet 4000			OK	
	Color LaserJet 4100			OK	
	Color LaserJet 4500			OK	
	Color Laserjet 4650	Install PCL Driver	OK	OK	OK
	Color LaserJet 8550 Color Laser	Parallel (PCL5C)		OK	
	Color Laserjet CM1312 MFP	USB	OK		OK
	Designjet 100		OK	OK	OK
	Designjet 600			OK	
	Designjet 650C			OK	
	Designjet 700			OK	
	Designjet 750C+			OK	
	DeskJet 1120C	Parallel (PCL3)		OK	
	Deskjet 1125C	Parallel/USB (PCL3)	OK	OK	OK
	Deskjet 1180C	Parallel/USB	OK	OK	OK
	DeskJet 1280	PCL3(USB/Parallel)	OK	OK	OK
	Deskjet 3325	USB	OK		OK
	DeskJet 3420	USB	OK		OK
	Deskjet 3535		OK		OK
	Deskjet 3650		OK		OK
	Deskjet 3743		OK		OK
	Deskjet 3748	USB	OK		OK
	Deskjet 3820	USB2.0/Parallel	OK	OK	OK
	DeskJet 3920		OK		OK
	DeskJet 3940		OK		OK
	DeskJet 400/420	Parallel		OK	
	Deskjet 450C		OK	OK	OK
	DeskJet 5440		OK		OK
	DeskJet 5500			OK	
	Deskjet 5550	USB/Parallel	OK	OK	OK
	Deskjet 5652	USB/Parallel	OK	OK	OK
	Deskjet 670C	Parallel(PCL3)		OK	
	Deskjet 680C			OK	
	Deskjet 720C	Parallel		OK	
	Deskjet 810C	USB2.0/Parallel(PCL3)	OK	OK	OK
	Deskjet 830C		OK	OK	OK
	Deskjet 845C	USB(PCL3)	OK		OK
	DeskJet 9300	USB/Parallel(PCL3)	OK	OK	OK
	Deskjet 948c	Parallel/USB	OK	OK	OK
	Deskjet 9600		OK	OK	OK
	Deskjet 9650	USB/Parallel(PCL3)	OK	OK	OK
	Deskjet 970c XI	Parallel/USB(PCL3)	OK	OK	OK
	Deskjet 9800	USB/Parallel	OK	OK	OK
	Deskjet D1560		OK		OK
	Deskjet D2560		OK		OK
	Deskjet D5560	USB	OK		OK
	DeskJet F370		OK		OK
	DeskJet F380		OK		OK
	DeskJet F4185		OK		OK
	DeskJet F4280		OK		OK
	Deskjet F4480	USB	OK		OK
	Laserjet M1005 MFP		OK		OK
	LaserJet 1022	USB(GDI)	OK		OK
	LaserJet 1022N		OK		OK

HP

Laserjet 1100	Parallel		OK	
LaserJet 1160	USB(PCL5e/GDI)	OK	OK	OK
LaserJet 1200	USB/Parallel (PCL6/5e)	OK	OK	OK
LaserJet 1220		OK	OK	OK
Laserjet 1300	USB/Parallel(PCL6/5e)	OK	OK	OK
Laserjet 1320	USB/Parallel(PCL6/5e)	OK	OK	OK
LaserJet 2100	Parallel (PCL6)		OK	
Laserjet 2200d	USB/Parallel	OK	OK	OK
Laserjet 2300	USB/Parallel(PCL6/5E)	OK	OK	OK
LaserJet 2410	PCL6/5E(USB)	OK	OK	OK
LaserJet 2420	USB/Parallel(PCL6/5E)	OK	OK	OK
LaserJet 2550		OK	OK	OK
LaserJet 3015	USB/Parallel(PCL6/5E)	OK	OK	OK
LaserJet 3050	USB(PCL6/PCL5E)	OK		OK
LaserJet 3055		OK		OK
Laserjet 3200	USB/Parallel(PCL6/5E)	OK	OK	OK
Laserjet 3330		OK	OK	OK
LaserJet 3330mfp	USB/Parallel (PCL6/5E)	OK	OK	OK
LaserJet 3380	USB/Parallel (PCL6/5E)	OK		OK
Laserjet 4000	Parallel(B.C)		OK	
LaserJet 4050	Parallel(PCL6/5e)		OK	
Laserjet 4100 /4100n	Parallel (PCL6/5E)		OK	
LaserJet 4250	USB/Parallel(PCL6/5E)	OK	OK	OK
Laserjet 4300n	Parallel (PCL6/5E)		OK	
Laserjet 4300tn/dtn	Parallel (PCL6/5E)		OK	
Laserjet 4500			OK	
Laserjet 4650		OK	OK	OK
Laserjet 5100fn/tn	Parallel (PCL6/5E)		OK	
Laserjet 5100le/se	Parallel (PCL6/5E)		OK	
Laserjet 6P / 6L	Parallel		OK	
Laserjet 8100			OK	
Laserjet M1005		OK		OK
Laserjet M1005 MFP		OK		OK
Laserjet M1120 MFP				OK
LaserJet M1319F MFP	USB	OK		OK
LaserJet P2015	USB(PCL6/5e/PS Level 3	OK		OK
Officejet J3608		OK		OK
OfficeJet 4255		OK		OK
OfficeJet 4255		OK		OK
OfficeJet 5610	USB	OK		OK
Officejet J5780		OK		OK
Officejet 6000	USB	OK		OK
OfficeJet 6210		OK		OK
OfficeJet 6310	USB	OK		OK
Officejet 6500	USB	OK		OK
Officejet 7000	USB			OK
OfficeJet 7210		OK		OK
OfficeJet J4580		OK		OK
Officejet J6480		OK		OK
Officejet K7100		OK		OK
OfficeJet K850		OK	OK	OK
OfficeJet Pro K5300		OK		OK
OfficeJet Pro K550		OK		OK
Officejet Pro K8600	USB	OK		OK
Officejet Pro L7380		OK		OK
Officejet Pro L7590		OK		OK
Officejet Pro 8000	USB	OK		OK
Officejet Pro 8500W	USB	OK		OK
Photosmart 2610		OK		OK
Photosmart 3110		OK		OK
Photosmart 7150	USB2.0	OK		OK
Photosmart 7200		OK		OK
Photosmart 7550	USB 2.0、 Parallel	OK		OK
Photosmart 7660	USB(PCL3)	OK		OK
Photosmart 7830		OK		OK
Photosmart 7900		OK		OK
Photosmart 8200		OK		OK

Photosmart Plus B209a	USB	OK		OK	
Photosmart A520		OK		OK	
Photosmart B109a	USB	OK		OK	
Photosmart C309a		OK		OK	
Photosmart C3180		OK		OK	
Photosmart C4180		OK		OK	
Photosmart C4280		OK		OK	
Photosmart C4385		OK		OK	
Photosmart C4480		OK		OK	
Photosmart C4580		OK		OK	
Photosmart C5180		OK		OK	
Photosmart C5280		OK		OK	
Photosmart C5380		OK		OK	
Photosmart C6180		OK		OK	
Photosmart C6280		OK		OK	
Photosmart C6380		OK		OK	
Photosmart C7180		OK		OK	
Photosmart C7280		OK		OK	
Photosmart C8180	USB	OK		OK	
Photosmart D5160		OK		OK	
Photosmart D5360		OK		OK	
Photosmart D5460		OK		OK	
Photosmart D7160		OK		OK	
Photosmart D7260		OK		OK	
Photosmart D7360		OK		OK	
Photosmart Premium C309g	USB	OK		OK	
PSC 1210	USB 2.0			OK	
PSC 1315		OK		OK	
PSC 1350	USB (LIDIL)	OK		OK	
PSC 1410		OK		OK	
PSC 1610		OK		OK	
PSC 2210		OK		OK	
PSC 2310	USB	OK		OK	
Marca	Modelo	Tipo de Impresora	5008	5003	5009
	Aculaser C1100SE		OK	OK	OK
	AcuLaser C1900	USB/Parallel(ESC/P2)	OK	OK	OK
	AcuLaser C3800		OK		OK
	AcuLaser C9100		OK		OK
	Aculaser M2010DN		OK		OK
	Aculaser M2010D		OK	OK	OK
	B-508DN		OK		OK
	C750		OK	OK	OK
	CC-500L		OK		OK
	CL-760		OK		OK
	E-300L		OK		OK
	E-520		OK		OK
	E-720		OK		OK
	EC-01		OK		OK
	EPL 5700			OK	
	EPL 5700	Parallel (ESC/Pages)		OK	
	EPL 5800		OK	OK	OK
	EPL 5800	USB/Parallel (PCL6/5e)	OK	OK	OK
	EPL 5900		OK	OK	OK
	EPL 5900	USB/Parallel	OK	OK	OK
	EPL 6100	USB/Parallel (PCL6/5e)	OK	OK	OK
	EPL 6200		OK	OK	OK
	EPL 6200	USB/Parallel (ESC/Pages	OK	OK	OK
	EPL N2120			OK	
	LP2500		OK		OK
	LP-7700		OK		OK
	LP-8700		OK		OK
	LP-8800C		OK		OK
	LP8900		OK		OK
	LP-9500C		OK		OK
	LQ 100			OK	
	LQ 1000C			OK	
	LQ 1170+			OK	
	LQ 1170C			OK	

EPSON

LQ 1170C+			OK	
LQ 2070C			OK	
LQ 2080C			OK	
LQ 2090			OK	
LQ 2090C		OK	OK	OK
LQ 2170C	Parallel(ESC/P)		OK	
LQ 2180C			OK	
LQ 2550			OK	
LQ 300	Parallel(ESC/P)		OK	
LQ 300+			OK	
LQ 300+II		OK	OK	OK
LQ 3500C			OK	
LQ 570C			OK	
LQ 670			OK	
LQ 680	Parallel(ESC/P)		OK	
LQ 680C			OK	
MC-2000		OK		OK
PictureMate PM250		OK		OK
PM-860PT		OK		OK
PM-890C		OK		OK
PM-920C		OK		OK
PM-930C		OK		OK
PM-950C		OK		OK
PM-970C		OK		OK
PM-980C		OK		OK
PM-A550		OK		OK
PM-A620		OK		OK
PM-A650		OK		OK
PM-A720		OK		OK
PM-A820		OK		OK
PM-A840		OK		OK
PM-A850		OK		OK
PM-A890		OK		OK
PM-A900		OK		OK
PM-A920		OK		OK
PM-A940		OK		OK
PM-A950		OK		OK
PM-A970		OK		OK
PM-2200C		OK		OK
PM-3500C		OK		OK
PM-3700C		OK		OK
PM-4000PX		OK		OK
PM-D800		OK		OK
PM-D870		OK		OK
PM-D1000		OK		OK
PM-FA700		OK		OK
PM-G800		OK		OK
PM-G820		OK		OK
PM-G850		OK		OK
PM-G860		OK		OK
PM-G4500		OK		OK
PM-T960		OK		OK
PM-T990		OK		OK
PX-5000		OK		OK
PX-A640		OK		OK
PX-A740		OK		OK
PX-G5300		OK		OK
PX-G5100		OK		OK
PX-G930		OK		OK
PX-G5000		OK		OK
PX-V780		OK		OK
RX 510		OK		OK
RX 530		OK		OK
RX 590		OK		OK
RX 630		OK		OK
RX 690		OK		OK
Stylus C20		OK		OK
Stylus C40		OK		OK
Stylus C41UX/SX	USB	OK		OK
Stylus C43UX		OK		OK
Stylus C45		OK		OK

Stylus C59		OK		OK
Stylus C60	USB/Parallel	OK	OK	OK
Stylus C63		OK	OK	OK
Stylus C67		OK	OK	OK
Stylus C79		OK		OK
Stylus C83			OK	
Stylus C90		OK		OK
Stylus Color 1160	USB/Parallel	OK		OK
Stylus Color 1500		OK		OK
Stylus Color 1520		OK		OK
Stylus Color 400	Parallel		OK	
Stylus Color 600			OK	
Stylus Color 670	USB/Parallel (ESC/P)	OK	OK	OK
Stylus Color 800	Parallel (ESC/P2)	OK	OK	OK
Stylus Color 810		OK	OK	OK
Stylus Color 850	Parallel (ESC/P2)	OK	OK	OK
Stylus Color 900	USB/Parallel (ESC/P2)	OK		OK
Stylus CX-1500		OK		OK
Stylus CX-2900		OK		OK
Stylus CX-3500		OK		OK
Stylus CX-3700		OK		OK
Stylus CX-3900		OK		OK
Stylus CX-4100		OK		OK
Stylus CX-4700		OK		OK
Stylus CX-4900		OK		OK
Stylus CX-5300		OK		OK
Stylus CX-5500		OK		OK
Stylus CX-5505		OK		OK
Stylus CX-5900		OK		OK
Stylus CX-6900F		OK		OK
Stylus CX-7300		OK		OK
Stylus CX-7800		OK		OK
Stylus CX-8300		OK		OK
Stylus CX-9300F		OK		OK
Stylus Office T30		OK		OK
Stylus Office T40W	USB	OK		OK
Stylus Office TX300F		OK		OK
Stylus Office TX510FN	USB	OK		OK
Stylus Office TX600FW		OK		OK
Stylus Office TX610FW	USB	OK		OK
Stylus Office T1100	USB	OK		OK
Stylus Photo 915		OK		OK
Stylus Photo 1270	USB/Parallel	OK	OK	OK
Stylus Photo 1290	USB/Parallel	OK		OK
Stylus Photo 1390		OK		OK
Stylus Photo 2100		OK		OK
Stylus Photo 710	USB/Parallel	OK		OK
Stylus Photo 720	USB/Parallel	OK		OK
Stylus Photo 790		OK		OK
Stylus Photo 810		OK	OK	OK
Stylus Photo 830U		OK		OK
Stylus Photo 900		OK	OK	OK
Stylus Photo 915		OK		OK
Stylus Photo EX2	Parallel	OK	OK	OK
Stylus Photo EX3	Parallel/USB1.1	OK	OK	OK
Stylus Photo R1800		OK	OK	OK
Stylus Photo R210	USB1.1	OK		OK
Stylus Photo R230	USB	OK		OK
Stylus Photo R250	USB	OK		OK
Stylus Photo R270	ESC/P(USB)	OK		OK
Stylus Photo R310	USB2.0	OK		OK
Stylus Photo R350		OK		OK
Stylus Photo R2400	USB	OK		OK
Stylus Photo R800		OK		OK
Stylus Photo RX430	USB	OK		OK
Stylus Photo RX 510		OK		OK
Stylus Photo RX 530		OK		OK
Stylus Photo RX 590		OK		OK
Stylus Photo RX 630		OK		OK
Stylus Photo RX 650		OK		OK

	Stylus Photo RX 690		OK		OK
	Stylus Photo R2880		OK		OK
	Stylus Photo TX700W	USB	OK		OK
	Stylus Photo TX800FW	USB	OK		OK
	Stylus Pro 7600	USB/Parallel	OK	OK	OK
	Stylus TX550W	USB	OK		OK
	Stylus TX410	USB	OK		OK
	Stylus TX200	USB	OK		OK
	Stylus TX210	USB	OK		OK
	Stylus TX100	USB	OK		OK
	Stylus TX110	USB	OK		OK
	Stylus T20	USB	OK		OK
	Stylus T21	USB	OK		OK
	Stylus Photo T50	USB	OK		OK
	TM883 (III)			OK	
	TM T88III			OK	
Marca	Modelo	Tipo de Impresora	5008	5003	5009
Canon	BJ-330			OK	
	BJC-4200			OK	
	BJC-4300	Parallel		OK	
	BJC-4500	Parallel			
	BJC-4550	Parallel		OK	
	BJC-4600			OK	
	BJF9000		OK		OK
	D380		OK		OK
	I-255		OK		OK
	I-355		OK		OK
	I-450		OK		OK
	I-455		OK		OK
	I-470D		OK		OK
	I-475D		OK		OK
	I-550		OK		OK
	I-560		OK		OK
	I-850	IEEE 1284/USB	OK		OK
	I-865		OK		OK
	I-950	USB 2.0	OK		OK
	I-6100		OK	OK	OK
	I-6500		OK	OK	OK
	I-9100		OK		OK
	I-9950		OK		OK
	IX4000		OK		OK
	IX5000		OK		OK
	Imageclass D380		OK		OK
	MP-160		OK		OK
	MP-638		OK		OK
	MP 770		OK		OK
	MX318		OK		OK
	MX320		OK		OK
	MX700		OK		OK
	PIXUS IP2500		OK		OK
	PIXUS 990i		OK		OK
	PIXMA iP1000	USB1.1	OK		OK
	PIXMA iP1700		OK		OK
	PIXMA iP1800		OK		OK
	PIXMA Ip1880	USB	OK		OK
	PIXMA Ip2000		OK		OK
	PIXMA iP3000	USB 2.0	OK		OK
	PIXMA Ip3300		OK		OK
	PIXMA Ip3500		OK		OK
	PIXMA iP4000	USB1.1/IEEE1284	OK	OK	OK
	PIXMA Ip4200		OK		OK
	PIXMA Ip4300		OK		OK
	PIXMA Ip4500		OK		OK
	PIXMA Ip5000		OK		OK
PIXMA Ip6000		OK		OK	
PIXMA Ip8500		OK		OK	
PIXMA MP110	USB	OK		OK	
PIXMA MP130		OK		OK	
PIXMA MP145		OK		OK	
PIXMA MP150	USB 2.0 (GDI)	OK		OK	

		PIXMA MP180		OK		OK
		PIXMA MP450		OK		OK
		PIXMA MP730		OK		OK
		PIXMA MP780		OK		OK
		PIXMA MP830		OK		OK
		S-200SPX		OK		OK
		S-520	Parallel/USB		OK	
Marca	Modelo	Tipo de Impresora	5008	5003	5009	
Lexmark	C720	Parallel		OK		
	E230	Parallel/USB2.0	OK		OK	
	E322	USB	OK	OK	OK	
	Optra S1250	Parallel		OK		
	P4350		OK		OK	
	P6250		OK		OK	
	T420		OK	OK	OK	
	T620		OK	OK	OK	
	W812	USB1.1/Parallel	OK	OK	OK	
	Z42		OK		OK	
	Z43	USB	OK	OK	OK	
	Z45	USB	OK		OK	
	Z55		OK	OK	OK	
	Z515		OK	OK	OK	
Z615	USB1.1	OK		OK		
Z705		OK	OK	OK		
FUJI Xerox	Able 3321			OK		
	DL700			OK		
	DL900			OK		
	DL-3400			OK		
	DL-3800			OK		
	DL-3850			OK		
	DL-5800			OK		
	DL-6400Pro			OK		
	DL-6800			OK		
	DocuPrint 2050	GDI(USB/Parallel)ok	OK	OK	OK	
	DocuPrint 240A		OK	OK	OK	
	Docuprint C1110B		OK		OK	
	FP 410			OK		
	Jet Wind 500C			OK		
Phaser 3310		OK	OK	OK		
PP 10			OK			
Marca	Modelo	Tipo de Impresora	5008	5003	5009	
Konica Minolta	Di 152	PCL-5		OK		
	Di 200/Di 250/Di 251	PCL-5		OK		
	magicolor 2450	USB (PCL-5)	OK	OK	OK	
	magicolor 5450	USB/Parallel (PCL-5)	OK	OK	OK	
	magicolor 7300		OK		OK	
	Magicolor 7300	IEEE1284/USB1.1	OK		OK	
	PagePro 9100	IEEE1284/USB1.1	OK		OK	
Samsung	CLP-500	(SPL)	OK	OK	OK	
	CLP-510		OK	OK	OK	
	CLX2160	USB	OK		OK	
	ML-1510/1710	(SPL)	OK	OK	OK	
	ML-1520		OK		OK	
	ML-1710		OK		OK	
	ML-1750	IEEE1284/USB(PCL6)	OK	OK	OK	
	ML-1915	USB	OK		OK	
	ML-2010	SPL(USB)	OK		OK	
	ML-2250		OK	OK	OK	
	ML-2550		OK	OK	OK	
	SCX-4016		OK	OK	OK	
SCX-4100/4106/4116/4216F	IEEE-1284/USB(SPL)	OK	OK	OK		
SRP 270				OK		
Panasonic	KX-P1121			OK		
	KX-P1123			OK		
	KX-P1124			OK		
	KX-P1624			OK		
	KX-P6500			OK		
TOSHIBA	E-161		OK(Parallel only)	OK	OK	
	Estudio-25			OK		
Marca	Modelo	Tipo de Impresora	5008	5003	5009	

NEC	NEC P2200			OK	
	NEC P3200			OK	
	NEC P5300			OK	
	NEC P8000			OK	
IBM	IBM Inforprint 20	IEEE 1284 Parallel		OK	
	Inforprint 1116		OK	OK	OK
	Inforprint 1312		OK	OK	OK
	Inforprint 1316		OK	OK	OK
	Inforprint 1332		OK	OK	OK
	Inforprint 1412		OK	OK	OK
Star	NX-2420			OK	
Sharp	AR-255			OK(Parallel only)	
	AR-265FG			OK(Parallel only)	
	AR-M160(AR-NB2)	IEEE 1284 , USB 2.0		OK(Parallel only)	
	AR-M205	IEEE 1284 , USB 2.0		OK(Parallel only)	
	AR-M207			OK(Parallel only)	
	AR-M209	IEEE 1284 , USB 2.0			
	AR-M235			OK(Parallel only)	
	AR-M236	IEEE 1284 , USB 2.0			
	AR-M275			OK(Parallel only)	
	AR-M276	IEEE 1284 , USB2.0			
	AR-M350			OK(Parallel only)	
	AR-M400			OK(Parallel only)	
	AR-M450			OK(Parallel only)	
RICOH	NF3570			OK	
Brother	MFC 4800		OK	OK	OK
	MFC 4800J		OK	OK	OK
	MFC 6800		OK	OK	OK
	MFC 7220	GDI(USB/Parallel)	OK	OK	OK
	MFC 7420	GDI(USB/Parallel)	OK	OK	OK
	MFC 7820N		OK	OK	OK
	MFC 8840D		OK	OK	OK
	MFC 210C		OK		OK
	MFC 240C		OK		OK
	HL1260			OK	
	HL-2040	PCL6(USB,Parallel)			
	HL-2170W	USB	OK		OK
	IntelliFax 2820		OK		OK
Others	AURORA AD-166 MFP	USB(GDI)			
	AURORA AD-216 MFP	USB(GDI)			
	AURORA AD-226 MFP	USB(GDI)			
	DELL 1100	Parallel/USB(GDI)			
	ZONERICH AB-80K Thermal receipt printer				
	OKI 5530	Parallel			
	OKI Microline 391			OK	
	OKI B4350		OK	OK	OK
	GSAN 5890 Thermal printer	Parallel			
MITAC	MP-6600C		OK		
	BENQ CM3000		OK		OK
Avision	MF 3200		OK		OK
	MF 3230		OK		OK
Citizen	G SX230			OK	
DATAMAX	I-4208			OK	
	I-4308			OK	
DOCUJET	1610F		OK	OK	OK
	UA1610		OK	OK	OK
FUTEK	F8000			OK	
	F84+			OK	
	F86+			OK	
Kyocera	FS-1010		OK	OK	OK
	FS-1010KX		OK		OK
	FS-1020		OK	OK	OK
	FS-1920		OK	OK	OK
	FS-2000D		OK	OK	OK
	FS-820		OK	OK	OK
	FS-920		OK	OK	OK
	FS-6020		OK	OK	OK
	FS-6026		OK	OK	OK