

Fabricante	Modelo de Impresora	Tipo de Impresora	5016
	Business InkJet 1000		●
	Business InkJet 1100	USB/Parallel	●
	Business InkJet cp1700	USB/Parallel	●
	Color Laserjet 1600	GDI(USB)	●
	Color Laserjet 2500	Parallel/USB (PCL6/5C)	●
	Color LaserJet 2550	PCL6/PS level 3 (USB)	●
	Color LaserJet 2550L/LN	PCL6/PS level 3 (USB)	●
	Color LaserJet 2600		●
	Color LaserJet 2605	PCL6/5E(USB)	●
	Color LaserJet 2700N	USB	●
	Color LaserJet 2840		●
	Color LaserJet 3550	USB	●
	Color LaserJet 3700	PCL6/5C(USB,Parallel)	●
	Color LaserJet 4000		
	Color LaserJet 4100		
	Color LaserJet 4500		
	Color Laserjet 4650	Install PCL Driver	●
	Color LaserJet 8550 Color Laser	Parallel (PCL5C)	
	Color Laserjet CP1215	USB	●
	Color Laserjet CM1015 MFP		●
	Color Laserjet CM1312 MFP	USB	●
	Designjet 100		●
	Designjet 500	Parallel/USB	●
	Designjet 600		
	Designjet 650C		
	Designjet 700		
	Designjet 750C+		
	DeskJet 1120C	Parallel (PCL3)	
	Deskjet 1125C	Parallel/USB (PCL3)	●
	Deskjet 1180C	Parallel/USB	●
	DeskJet 1280	PCL3(USB/Parallel)	●
	Deskjet 2000 J210		●
	DeskJet 2300	USB	●
	Deskjet 3000		●
	Deskjet 3325	USB	●
	DeskJet 3420	USB	●
	Deskjet 3535		●
	Deskjet 3650		●
	Deskjet 3743		●
	Deskjet 3745	USB	●
	Deskjet 3748	USB	●
	Deskjet 3820	USB2.0/Parallel	●
	DeskJet 3920		●
	DeskJet 3940		●
	DeskJet 400/420	Parallel	
	Deskjet 450C		●

Deskjet 500	USB	●
Deskjet 500C	Parallel	▧
DeskJet 5440		●
DeskJet 5500		▧
Deskjet 5550	USB/Parallel	●
Deskjet 5652	USB/Parallel	●
Deskjet 5740	Parallel	▧
Deskjet 610C	USB	●
Deskjet 670C	Parallel(PCL3)	▧
Deskjet 680C		▧
Deskjet 720C	Parallel	▧
Deskjet 810C	USB2.0/Parallel(PCL3)	●
Deskjet 830C		●
Deskjet 845C	USB(PCL3)	●
Deskjet 895Cxi	Parallel/USB	●
Deskjet 920	Parallel/USB	●
DeskJet 9300	USB/Parallel(PCL3)	●
DeskJet 930C	USB/Parallel(PCL3)	●
Deskjet 948c	Parallel/USB	●
Deskjet 9600		●
Deskjet 9650	USB/Parallel(PCL3)	●
Deskjet 970c XI	Parallel/USB(PCL3)	●
Deskjet 9800	USB/Parallel	●
Deskjet D1560		●
Deskjet D2560		●
Deskjet D5560	USB	●
DeskJet F370		●
DeskJet F380		●
DeskJet F4185		●
DeskJet F4280		●
Deskjet F4480	USB	●
Laserjet M1005 MFP		●
LaserJet 1022	USB(GDI)	●
LaserJet 1022N		●
Laserjet 1100	Parallel	▧
LaserJet 1160	USB(PCL5e/GDI)	●
LaserJet 1200	USB/Parallel (PCL6/5e)	●
LaserJet 1220		●
Laserjet 1300	USB/Parallel(PCL6/5e)	●
Laserjet 1320	USB/Parallel(PCL6/5e)	●
LaserJet 2100	Parallel (PCL6)	▧
Laserjet 2200/d	USB/Parallel	●
Laserjet 2300	USB/Parallel(PCL6/5E)	●
LaserJet 2410	PCL6/5E (USB)	●
LaserJet 2420	USB/Parallel(PCL6/5e)	●
LaserJet 2550		●
LaserJet 3015	USB/Parallel(PCL6/5e)	●

HP

LaserJet 3030	USB/Parallel	●
LaserJet 3050	USB(PCL6/PCL5E)	●
LaserJet 3055/Z		●
Laserjet 3200	USB/Parallel(PCL6/5E)	●
Laserjet 3330		●
LaserJet 3330mfp	USB/Parallel PCL6/5E)	●
LaserJet 3380	USB/ParallelPCL6/5E)	●
Laserjet 4+	Parallel (B.C)	▧
Laserjet 4000	Parallel (B.C)	▧
LaserJet 4050	Parallel (PCL6/5e )	▧
Laserjet 4100 /4100n	Parallel (PCL6/5E )	▧
LaserJet 4250	USB/Parallel(PCL6/5E)	●
Laserjet 4300n	Parallel (PCL6/5E)	▧
Laserjet 4300tn/dtn	Parallel (PCL6/5E)	▧
Laserjet 4500		▧
Laserjet 4650	USB/Parellel	●
Laserjet 5000/LE	USB/Parellel	●
Laserjet 5100fn/tn	Parallel (PCL6/5E)	▧
Laserjet 5100le/se	Parallel (PCL6/5E)	▧
Laserjet 5200	USB/Parieell	●
Laserjet 5L/si	Parallel	▧
Laserjet 6P / 6L	Parallel	▧
Laserjet 8100		▧
Laserjet M1005		●
Laserjet M1005 MFP		●
Laserjet M1120 MFP		●
LaserJet M1319F MFP	USB	(Win XP) ●
Laserjet M1522n MFP		●
LaserJet P2015	USB(PCL6/5e/PS Level 3	●
Officejet J3608		●
OfficeJet 4110	USB	●
OfficeJet 4255		●
OfficeJet 4355	USB	●
Officejet 4500		●
OfficeJet 5510	USB	●
OfficeJet 5610	USB	●
Officejet J5780		●
Officejet 6000	USB	●
OfficeJet 6210		●
OfficeJet 6310	USB	●
Officejet 6500	USB	●
Officejet 6610	USB	●
Officejet 7000	USB	●
OfficeJet 7210		●
OfficeJet H470b	USB	●
OfficeJet J4580		●
Officejet J4660		●

Officejet J6480		●
Officejet K7100		●
OfficeJet K850		●
OfficeJet Pro K5300		●
OfficeJet Pro K5400dn	USB	●
OfficeJet Pro K550		●
Officejet Pro K8600	USB	●
Officejet Pro L7380		●
Officejet Pro L7590		●
Officejet Pro 7000		●
Officejet Pro 8000	USB	●
Officejet Pro 8500W	USB	●
Photosmart 2610		●
Photosmart 3110		●
Photosmart 7150	USB2.0	●
Photosmart 7200		●
Photosmart 7550	USB 2.0、 Parallel	●
Photosmart 7660	USB(PCL3)	●
Photosmart 7830		●
Photosmart 7900		●
Photosmart 8200		●
Photosmart Plus B209a	USB	●
Photosmart Plus B210a	USB	●
Photosmart Plus C310a	USB	●
Photosmart A310		●
Photosmart A520		●
Photosmart B109a	USB	●
Photosmart B110a AIO		●
Photosmart C309a		●
Photosmart C3180		●
Photosmart C4180		●
Photosmart C4280		●
Photosmart C4385		●
Photosmart C4480		●
Photosmart C4580		●
Photosmart C5180		●
Photosmart C5280		●
Photosmart C5380		●
Photosmart C6180		●
Photosmart C6280		●
Photosmart C6380		●
Photosmart C7180		●
Photosmart C7280		●
Photosmart C8180	USB	●
Photosmart D5160		●
Photosmart D5360		●
Photosmart D5460		●

Photosmart D7160		●
Photosmart D7260		●
Photosmart D7360		●
Photosmart Premium C309a/g	USB	●
Photosmart Premium C310g		●
PSC 1210	USB 2.0	●
PSC 1315		●
PSC 1350	USB (LIDIL)	●
PSC 1410		●
PSC 1510		●
PSC 1610		●
PSC 2210		●
PSC 2310	USB	●
Aculaser C1100SE		●
Aculaser C1600		●
AcuLaser C1900	USB/Parallel(ESC/P2)	●
AcuLaser C3800		●
AcuLaser C3800N		●
AcuLaser C9100		●
Aculaser M2010DN		●
Aculaser M2010D		●
B-508DN		●
B-518DN		●
C750		●
CC-500L		●
CL-760		●
DLQ-3500C	Parallel	▬
E-300L		●
E-520		●
E-720		●
EC-01		●
EPL 5700		▬
EPL 5700	Parallel (ESC/Pages)	▬
EPL 5800		●
EPL 5800	USB/Parallel PCL6/5e)	●
EPL 5900		●
EPL 5900	USB/Parallel	●
EPL 6100	USB/Parallel PCL6/5e)	●
EPL 6200		●
EPL 6200	USB/Parallel ESC/Pages	●
EPL N2120		▬
LP2500		●
LP-7700		●
LP-8300	Parallel	▬
LP-8700		●
LP-8800C		●
LP8900		●

LP-9500C		●
LQ 100		▧
LQ 1000C		▧
LQ 1170+		▧
LQ 1170C		▧
LQ 1170C+		▧
LQ 2070C		▧
LQ 2080C		▧
LQ 2090		▧
LQ 2090C		●
LQ 2170C	Parallel(ESC/P)	▧
LQ 2180C		▧
LQ 2550		▧
LQ 300	Parallel(ESC/P)	▧
LQ 300+		▧
LQ 300+II		●
LQ 3500C		▧
LQ 570C		▧
LQ 570C+	Parallel	▧
LQ 670		▧
LQ 670C		▧
LQ 680	Parallel(ESC/P)	▧
LQ 680C		▧
LQ 690C	Parallel/USB	●
MC-2000		●
ME 320	USB	●
PictureMate PM250		●
PLQ-20C		●
PLQ-20CM		●
PM-2200C		●
PM-3500C		●
PM-3700C		●
PM-860PT		●
PM-890C		●
PM-920C		●
PM-930C		●
PM-950C		●
PM-970C		●
PM-980C		●
PM-A550		●
PM-A620		●
PM-A650		●
PM-A720		●
PM-A820		●
PM-A840		●
PM-A850		●
PM-A890		●

**EPSON**

PM-A900		●
PM-A920		●
PM-A940		●
PM-A950		●
PM-A970		●
PM-2200C		●
PM-3500C		●
PM-3700C		●
PM-4000PX		●
PM-D800		●
PM-D870		●
PM-D1000		●
PM-FA700		●
PM-G800		●
PM-G820		●
PM-G850		●
PM-G860		●
PM-G4500		●
PM-T960		●
PM-T990		●
PX-5000		●
PX-A640		●
PX-A740		●
PX-G5300		●
PX-G5100		●
PX-G930		●
PX-G5000		●
PX-V780		●
RX 510		●
RX 530		●
RX 590		●
RX 630		●
RX 690		●
Stylus C110		●
Stylus C20		●
Stylus C40		●
Stylus C41UX/SX	USB	●
Stylus C43UX		●
Stylus C45		●
Stylus C59		●
Stylus C60	USB/Parallel	●
Stylus C63		●
Stylus C67		●
Stylus C79		●
Stylus C83		●
Stylus C90		●
Stylus Color 1160	USB/Parallel	●

Stylus Color 1500		●
Stylus Color 1520		●
Stylus Color 400	Parallel	●
Stylus Color 600		●
Stylus Color 670	USB/Parallel (ESC/P)	●
Stylus Color 800	ParallelESC/P2	●
Stylus Color 810		●
Stylus Color 850	Parallel ESC/P2	●
Stylus Color 900	USB/Parallel (ESC/P2)	●
Stylus Color PRO 7600	USB/Parallel	●
Stylus CX-1500		●
Stylus CX-2900		●
Stylus CX-3500		●
Stylus CX-3700		●
Stylus CX-3900		●
Stylus CX-4100		●
Stylus CX-4700		●
Stylus CX-4900		●
Stylus CX-5300		●
Stylus CX-5500		●
Stylus CX-5505		●
Stylus CX-5700F	USB	●
Stylus CX-5900		●
Stylus CX-6900F		●
Stylus CX-7300		●
Stylus CX-7800		●
Stylus CX-8300		●
Stylus CX-9300F		●
Stylus Office T30		●
Stylus Office T40W	USB	●
Stylus Office TX300F		●
Stylus Office TX510FN	USB	●
Stylus Office TX600FW		●
Stylus Office TX610FW	USB	●
Stylus Office TX700W	USB	●
Stylus Office TX800FW	USB	●
Stylus Office T1100	USB	●
Stylus Photo 915		●
Stylus Photo 1270	USB/Parallel	●
Stylus Photo 1290	USB/Parallel	●
Stylus Photo 1390		●
Stylus Photo 2100		●
Stylus Photo 710	USB/Parallel	●
Stylus Photo 720	USB/Parallel	●
Stylus Photo 790		●
Stylus Photo 810		●
Stylus Photo 830U		●

Stylus Photo 900		●
Stylus Photo 915		●
Stylus Photo EX2	Parallel	●
Stylus Photo EX3	Parallel/USB1.1	●
Stylus Photo R1800		●
Stylus Photo R1900	USB	●
Stylus Photo R210	USB1.1	●
Stylus Photo R230	USB	●
Stylus Photo R250	USB	●
Stylus Photo R270	ESC/P(USB)	●
Stylus Photo R310	USB2.0	●
Stylus Photo R350		●
Stylus Photo R2400	USB	●
Stylus Photo R290	USB	●
Stylus Photo R310	USB	●
Stylus Photo R350	USB	●
Stylus Photo R800		●
Stylus Photo RX430	USB	●
Stylus Photo RX 510		●
Stylus Photo RX 530		●
Stylus Photo RX 590		●
Stylus Photo RX 630		●
Stylus Photo RX 650		●
Stylus Photo RX 690		●
Stylus Photo R2880		●
Stylus Photo TX700W	USB	●
Stylus Photo TX800FW	USB	●
Stylus Pro 7600	USB/Parallel	●
Stylus PM-700C	USB	●
Stylus PRO 4000	USB	●
Stylus Pro 7600	USB/Parallel	●
Stylus TX510FN	USB	●
Stylus TX610FW	USB	●
Stylus TX550W	USB	●
Stylus TX410	USB	●
Stylus TX420W	USB	●
Stylus TX200	USB	●
Stylus TX210	USB	●
Stylus TX220	USB	●
Stylus TX100	USB	●
Stylus TX110	USB	●
Stylus T20	USB	●
Stylus T21	USB	●
Stylus T22	USB	●
Stylus Photo T50	USB	●
TM883(III)		
TM-U210B	Parallel	

	TM T88III		
CANON	BJ-330		
	BJC-4200		
	BJC-4300	Parallel	
	BJC-4500	Parallel	
	BJC-4550	Parallel	
	BJC-4600	Parallel	
	BJC-620	Parallel	
	BJF9000		●
	D380		●
	i2355	USB	●
	I-255		●
	i320	USB	●
	I-355		●
	I-450		●
	I-455		●
	I-470D		●
	I-475D		●
	I-550		●
	I-560		●
	I-850	IEEE 1284/USB	●
	I-865		●
	I-950	USB 2.0	●
	I-6100		●
	I-6500		●
	i850	USB	●
	i865	USB	●
	i905D	USB	●
	I-9100		●
	i950	USB	●
	I-9950		●
	IP3680		●
	IX4000		●
	IX5000		●
	Imageclass D380		●
	MP-160		●
	MP-198	USB	●
	MP-258	USB	●
	MP-638		●
	MP 770		●
	MX318		●
	MX320		●
MX357		●	
MX700		●	
PIXUS IP2500		●	
PIXUS 990i		●	
PIXMA iP1000	USB1.1	●	

PIXMA iP1700		●
PIXMA iP1800		●
PIXMA ip1880	USB	●
PIXMA ip1980	USB	●
PIXMA ip2000		●
PIXMA iP3000	USB 2.0	●
PIXMA ip3300		●
PIXMA ip3500		●
PIXMA ip3680	USB	●
PIXMA iP4000	USB1.1/IEEE1284	●
PIXMA ip4200		●
PIXMA ip4300		●
PIXMA ip4500		●
PIXMA ip4680	USB	●
PIXMA iP4760		●
PIXMA ip5000		●
PIXMA ip6000		●
PIXMA ip6000D	USB	●
PIXMA ip8500		●
PIXMA MP110	USB	●
PIXMA MP130		●
PIXMA MP145		●
PIXMA MP150	USB 2.0 (GDI)	●
PIXMA MP160	USB	●
PIXMA MP180		●
PIXMA MP258	USB	●
PIXMA MP450		●
PIXMA MP730		●
PIXMA MP780		●
PIXMA MP830		●
PIXMA MX320		●
PIXMA MX357		●
PIXUS 990i		●
PIXUS MP770		●
PIXUS IP2500		●
S200SRx		●
S400		●
S520		●
S-200SPX		●
S-520	Parallel/USB	●
C720	Parallel	●
E230	Parallel/USB2.0	●
E322	USB	●
Optra S1250	Parallel	●
P4350		●
P6250		●
T420		●

<b>LEXMARK</b>	T620		●
	W812	USB1.1/Parallel	●
	Z42		●
	Z43	USB	●
	Z45	USB	●
	Z55		●
	Z515		●
	Z615	USB1.1	●
	Z705		●
<b>FUJI Xerox</b>	Able 3321		▧
	DL700		▧
	DL900		▧
	DL-3400		▧
	DL-3800		▧
	DL-3850		▧
	DL-5800		▧
	DL-6400Pro		▧
	DL-6800		▧
	DocuPrint 2050	GDI(USB/Parallel)ok	●
	DocuPrint 240A		●
	Docuprint C1110B		●
	FP 410		▧
	Jet Wind 500C		▧
	Phaser 3120	Parallel	▧
	Phaser 3310	USB/Parallel	●
Phaser 3310		●	
WorkCentre3119	USB	●	
PP 10		▧	
<b>KONICA MINOLTA</b>	Di 152	PCL-5	▧
	Di 200/Di 250/Di 251	PCL-5	▧
	magicolor 2450	USB (PCL-5)	●
	magicolor 5450	USB/Parallel (PCL-5)	●
	magicolor 7300		●
	PagePro 1350W		●
	PagePro 1380MF	USB	●
	PagePro 1390MF	USB	●
	PagePro 9100	IEEE1284/USB1.1	●
	CLP-315		●
	CLP-500	(SPL)	●
	CLP-510		●
	CLP-620ND		●
	CLX2160	USB	●
	ML-1250	USB/Parallel	●
	ML-1510/1710	(SPL)	●
	ML-1520		●
	ML-1660		●
	ML-1710		●

<b>SAMSUNG</b>	ML-1750	IEEE1284/USB(PCL6)	●
	ML-1915	USB	●
	ML-2010	SPL(USB)	●
	ML-2250		●
	ML-2550		●
	ML-2580N		●
	ML-3471ND		●
	SCX-4016		●
	SCX-4200	USB	●
	SCX-4100/4106/4116/4216F	IEEE-1284/USB(SPL)	●
	SCX-4521F	USB/Parallel	●
	SRP 270		
	<b>PANASONIC</b>	KX-P1121	
KX-P1123			
KX-P1124			
KX-P1624			
KX-P6500			
<b>TOSHIBA</b>	E-161		(Solo Parallel) ●
	Estudio-25		
<b>NEC</b>	NEC P2200		
	NEC P3200		
	NEC P5300		
	NEC P8000/C		
<b>IBM</b>	IBM Inforprint 20	IEEE 1284 Parallel	
	Infoprint 1116		●
	Infoprint 1312		●
	Infoprint 1316		●
	Infoprint 1332		●
	Infoprint 1412		●
	5577-KC2	Parallel	
<b>START</b>	NX-2410	Parallel	
	NX-2420		
<b>SHARP</b>	AR-255		
	AR-265FG		
	AR-5316	USB/Parallel	●
	AR-M160(AR-NB2)	IEEE 1284 USB 2.0	
	AR-M185(AR-NB2)	Parallel	
	AR-M205	IEEE 1284USB 2.0	
	AR-M207		
	AR-M209	IEEE 1284USB 2.0	
	AR-M235		
	AR-M236	IEEE 1284 USB 2.0	
	AR-M275		
	AR-M276	IEEE 1284 USB 2.0	
	AR-M350		
	AR-M351U	Parallel	
AR-M400			

	AR-M450		
<b>RICOH</b>	AfcioMP1600	USB	●
	MF1530	Parallel	
	imagioMF2730	Parallel	
	NF3570		
<b>BROTHER</b>	MFC 4800		●
	MFC 4800J		●
	MFC 6800		●
	MFC 7220	GDI(USB/Parallel)	●
	MFC 7420	GDI(USB/Parallel)	●
	MFC 8840D		●
	MFC 210C		●
	MFC 240C		●
	HL1260		
	HL-2040	PCL6(USB,Parallel)	
	HL-2140		●
	HL-2170W	USB	●
	IntelliFax 2820		●
<b>OTHERS</b>	AURORA AD-166 MFP	USB(GDI)	
	AURORA AD-216 MFP	USB(GDI)	
	AURORA AD-226 MFP	USB(GDI)	
	DELL 1100	Parallel/USB(GDI)	
	ZONERICH AB-80K Thermal receipt printer		
	TECO DOCUJET UA1610F	USB/Parallel	●
	OKI 5530	Parallel	
	OKI Microline 391		
	OKI B4350		●
	GSAN 5890 Thermal printer	Parallel	
	MITAC	MP-6600C	
	BENQ CM3000		●
<b>AVISION</b>	MF 3200		●
	MF 3230		●
<b>CITIZEN</b>	GSX230		
<b>DATAMAX</b>	I-4208		
	I-4308		
<b>DOCUJET</b>	1610F		●
	UA1610		●
<b>FUTEK</b>	F8000		
	F70+	Parallel	
	F80+	Parallel	
	F8000	Parallel	
	F84+	Parallel	
	F90	Parallel	
	F9000	Parallel	
	F95	Parallel	
	F96	Parallel	

	F94	Parallel	
	F93	Parallel	
	F86+		
KYOCERA	FS-1010		●
	FS-1010KX		●
	FS-1020/D		●
	FS-1030D	USB/parallel	●
	FS-1920		●
	FS-2000D		●
	FS-820		●
	FS-920 FS-6020		●
	FS-6026		●
	FS-820	USB/parallel	●
	FS-920	USB/parallel	●
FUJITSU	DL3400	Parallel	
	DL3800中文機	Parallel	
	DL3850	Parallel	
	DL6400	Parallel	
	DL6800	Parallel	
	DL5800	Parallel	
	DL700	Parallel	
	DL900	Parallel	
	PP10	Parallel	
	FP410	Parallel	
	DL5800	Parallel	